



[Portal](#) > [Knowledgebase](#) > [Satellite Phones](#) > [Iridium Extreme](#) > [Inserting a SIM Card into an Iridium Extreme handset](#)

Inserting a SIM Card into an Iridium Extreme handset

Lu Parente - 2017-12-06 - in [Iridium Extreme](#)

Follow the instructions below for assistance on how to insert a SIM card into an Iridium Extreme handset.

Solution: Inserting SIM card

1. Remove the battery by twisting the D-ring screw counter clockwise then remove the battery from the handset by pulling forward. See the diagram below for additional assistance

Remove and Install the Battery Pack

The back panel of the phone is the battery pack. You need to remove the battery pack to insert the SIM card or replace the battery.

To Remove the Battery Pack



Insert the SIM Card

1. Remove the SIM card from the larger card.
2. Remove the battery
3. Slide the SIM card into the SIM card slot. Follow the card orientation shown on the decal. Be sure the gold contact is facing down.
4. Slide the retaining clip down until you hear a 'click' to secure the SIM card.



2. Unlock the SIM card door by sliding it to upwards
3. Take note on the position of the cut corner while still inserted in the slot.
4. Lift the SIM card door
5. Insert SIM card into SIM card door
6. Ensure the cut corner of the SIM card is aligned with the cut corner on the handset
7. Close SIM card door
8. Slide the SIM card door downwards to lock it in place
9. Insert the battery from the bottom first then twist the D-ring screw clockwise to lock it in place
10. Firmly press on the center of the battery to ensure it is properly seated
11. Press and hold power button
12. The handset will power on and begin to search for the Iridium network

Watch the video below for assistance with installing the SIM into the Iridium Extreme handset.